



Nokia 2630b LCD Display Replacement

Released on May 2007, Weight 66g , 9.9mm thickness Size 1.8 inches , Resolution 128 x 160 pixels

Written By: LOGESAM





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Plastic Cards](#) (1)



PARTS:


- [Nokia 2630b LCD display](#) (1)

Step 1 — LCD Display




- Remove the Back cover by Pressing the release buttons located on either side of the battery cover
- Now Remove The Battery and Simcard from the slots

Step 2

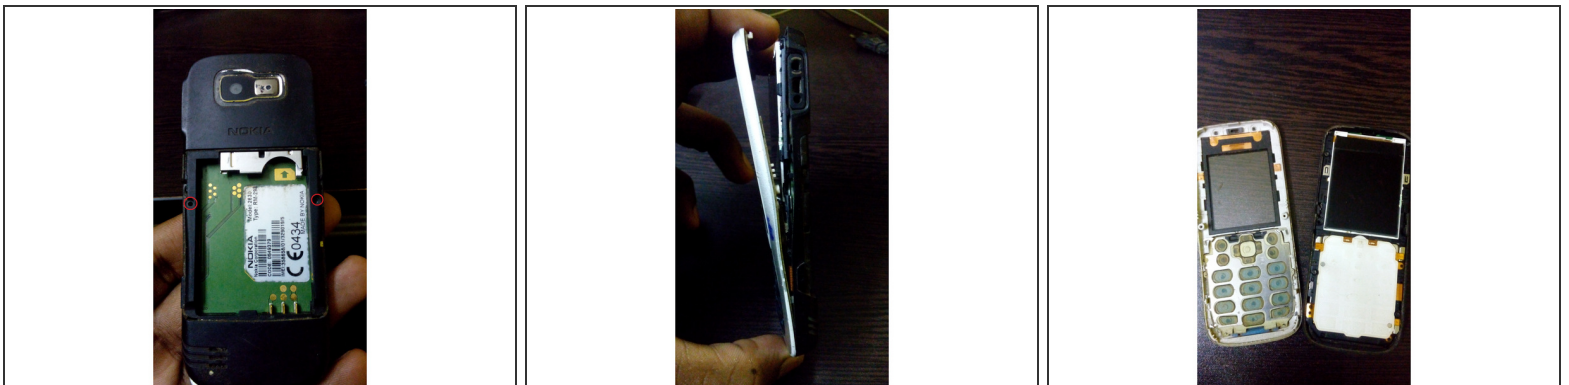


- Remove the two screws on either side of the back side using the micro-screwdriver using the T5 bit
- Now Remove the Front key panel from the Main Board Carefully using the Plastic Opening Tools

Step 3

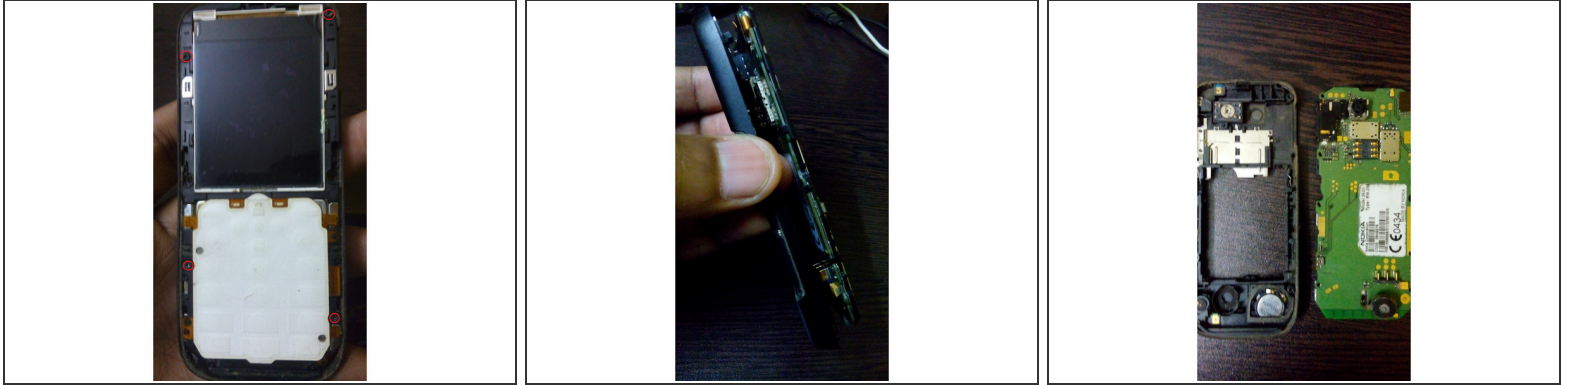


- Now Remove the four screws in the front side of the main board
- Now push the Board from the Battery slot side and carefully By using the Plastic Opening Tools Separate the board from the back case or rear case

Step 4

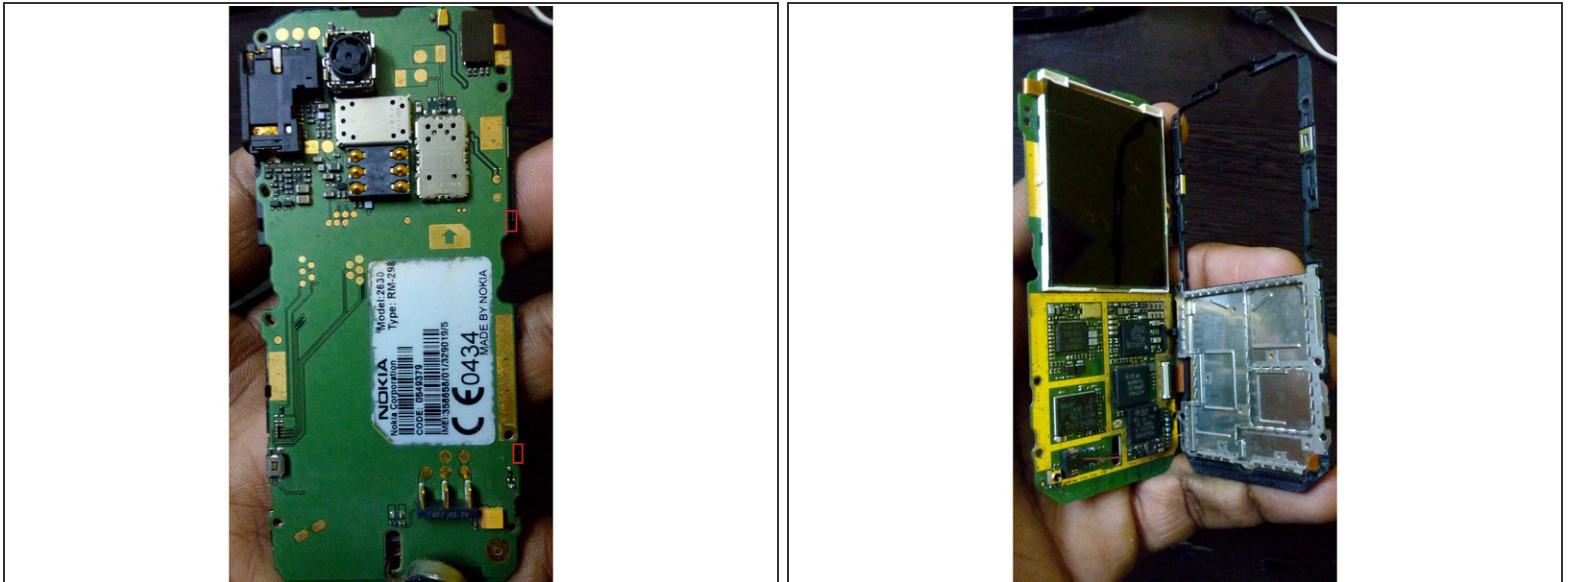

- Now Gently Separate the lock at the right side to remove the outer cover of the Main Board
- !!!! Be Cautious that the key panel is attached at the other end

Step 5

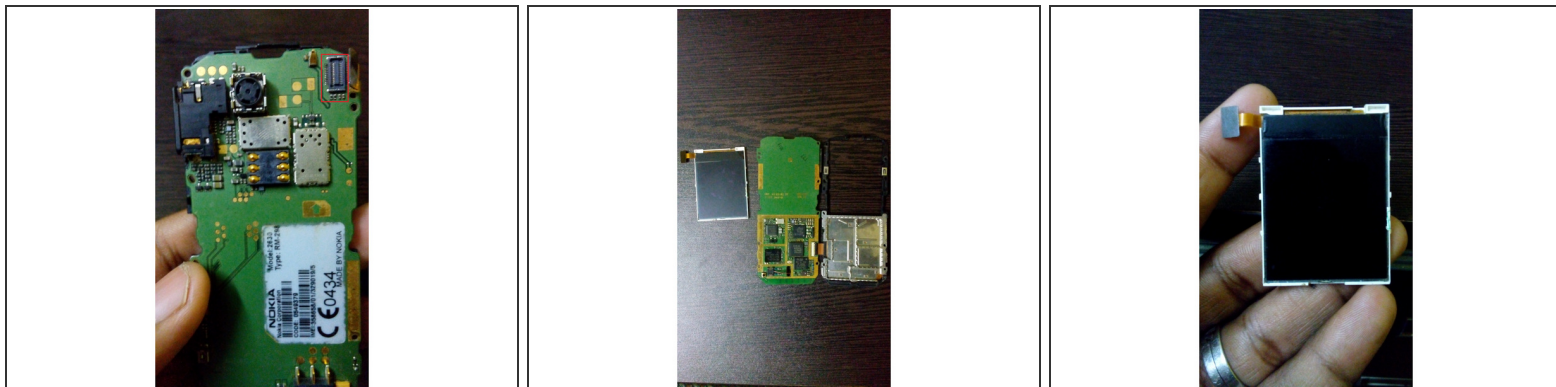

- Remove the Chip which is attached to the main board
- Now we can separate the display from the main board and we can replace it with the new display.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:04:25 PM.